



# **UPUTSTVA ZA KORIŠTENJE**

## **USER MANUAL**

**ZE-09WSE**

**ZE-09OSE**

**ZE-12WSE**

**ZE-12OSE**

**ZE-18WSE**


**ZE-18OSE**

Hvala što ste kupili naš klima uređaj. Molimo Vas da pažljivo pročitate upute prije uporabe klima uređaja. Spremite upute za buduću uporabu.

## SADRŽAJ

Rukovanje daljinskim upravljačem .....	2
Specifikacija daljinskog upravljača .....	3
Funkcije tipki .....	5
Indikatori na zaslonu .....	7
Upotreba tipki .....	8
Automatski rad .....	8
Hlađenje/grijanje/rad ventilatora .....	8
Odvlaživanje .....	9
Podešavanje smjera puhanja .....	9
Funkcija Timer .....	10

### Rukovanje daljinskim upravljačem

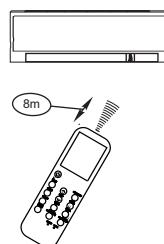

#### Položaj daljinskog upravljača.

- Upotrebljavajte daljinski upravljač unutar udaljenosti do 8 m od aparata. Usmjerite ga prema prijemniku. Prijem je potvrđen zvukom "beep".

#### OPREZ

- Klima uređaj neće funkcionirati ukoliko zavjese, vrata ili drugi predmeti blokiraju signale od daljinskog upravljača prema unutarnjoj jedinici.
- Sprječite ulazak tekućine u daljinski upravljač. Ne izlažite daljinski upravljač izravnoj sunčevoj svjetlosti ili toplini.
- Ukoliko se IC signalni prijemnik na unutarnjoj jedinici izloži izravnoj sunčevoj svjetlosti, klima uređaj možda neće ispravno funkcionirati. Zavjesama sprječite padanje sunčeve svjetlosti na prijemnik.
- Ukoliko drugi električni uređaji reagiraju na daljinski upravljač, premjestite ih ili se posavjetujte s dobavljačem.
- Zamjenite baterije kada klima uređaj ne reagira na daljinski upravljač i kada ne čujete "beep" kao potvrdu komunikacije između uređaja i daljinskog.

#### Zamjena baterija

U daljinskom upravljaču se koriste dvije alkalne suhe baterije (R03/LR03X2) koje se nalaze ispod poklopca na zadnjoj strani.

- (1) Uklonite poklopac tako da ga stisnete i povučete prema dolje.
- (2) Uklonite stare baterije i umetnite nove, umetnite ispravno(+) i (-) polove.
- (3) Vratite poklopac na mjesto.

**NAPOMENA:** Kada se baterije uklone, daljinski upravljač briše sve što je programirano. Nakon umetanja novih baterija daljinski upravljač treba ponovo programirati.

#### OPREZ

- Ne miješajte stare i nove baterije i baterije različite tipove baterija.
- Ne ostavljajte baterije u daljinskom upravljaču ako ga nećete upotrebljavati 2 ili 3 mjeseca.
- DNe odlažite baterije u obično smeće. Stare baterije odlažite u za to predviđeno mjesto.


## **Specifikacije daljinskog upravljača**

Model	RG52A1/BG(C)EF
Radni napon	3.0V(Suhe baterije R03/LR03×2)
Domet signala	8m
Radna okolina	-5°C~60°C

## **Funkcije upravljača**

1. Način rada: AUTO, HLAĐENJE, ODVLAŽIVANJE, GRIJANJE i VENTILACIJA
2. Podešavanje funkcije Timer unutar 24 sata.
3. Raspon postavki unutarnje temperature: 17°C~30°C.
4. Potpuna funkcija LCD-a (Liquid Crystal Display).

RG52A1/BG(C)EF

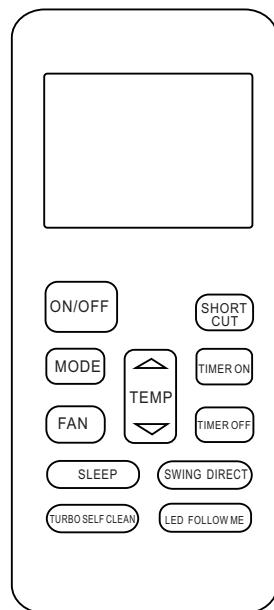


3

## **NAPOMENA:**

- Tipke se mogu malo razlikovati ovisno o modelu.
- Sve opisane funkcije su u skladu s unutarnjom jedinicom. Ako unutarnja jedinica nema neku funkciju, ako pritisnemo tipku za tu funkciju na daljinskom upravljaču, neće se ništa dogoditi.

4

## Funkcije tipki

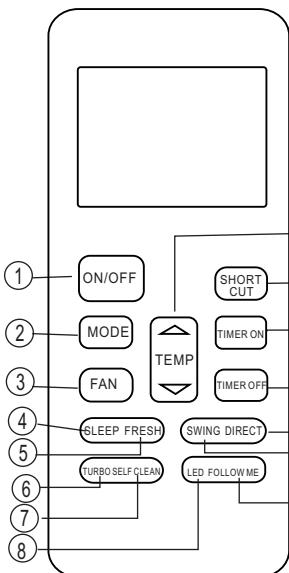


### ① ON/OFF tipka

Rad uređaja počinje pritiskom na ovu tipku i prestaje ponovnim pritiskom na tipku.

### ② MODE tipka

Svakim pritiskom na ovu tipku mijenja se način rada uređaja u smjeru strelice:

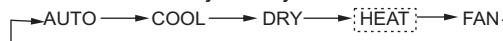

### ③ FAN tipka

Pritisak na ovu tipku birate brzinu ventilatora u 4 koraka:



### ④ SLEEP tipka

- Aktivira/Deaktivira sleep funkciju. Održava najudobniju temperaturu i štedi energiju. Ova funkcija je raspoloživa u načinu rada COOL, HEAT ili AUTO.

**NAPOMENA:** Dok uređaj radi u SLEEP načinu, ako pritisnete tipku MODE, FAN SPEED ili ON/OFF, SLEEP način rada prestaje.

### ⑤ FRESH tipka

Aktivira i deaktivira osvježavanje zraka pomoću ionizatora ili Plasma Dust Collector-a (ovisno o modelu).

### ⑥ TURBO tipka

Aktivira/Deaktivira Turbo funkciju. Turbo funkcija omogućava postizanje željene temperature u najkraćem vremenu (ako unutarnja jedinica ne podržava tu funkciju, pritiskom na tipku neće se ništa dogoditi).

### ⑦ SELF CLEAN Button

Aktivira/Deaktivira funkciju samočišćenja.

### ⑧ LED tipka

Deaktivira/Aktivira prikaz na unutarnjoj jedinici. Kad pritisnete tipku prikaz je prazan, kad pritisnete ponovo, prikaz se osvijetli.

### ⑨ UP tipka ( ▲ )

Pritisnite ovu tipku za povećanje postavke unutarnje temperature u koracima od 1°C do maksimalnih 30°C.

### DOWN tipka ( ▼ )

Pritisnite ovu tipku za snižavanje postavke unutarnje temperature u koracima od 1°C do minimalnih 17°C.

### ⑩ SHORTCUT tipka

- Upotrebljava se da bi produžila tekuće postavke ili obnovila prijašnje.
- Prvi put kad se priključi na struju, ako pritisnete tipku SHORTCUT, uređaj će raditi u načinu AUTO (automatski), 26°C, i brzinom ventilatora Auto.
- Pritisnite ovu tipku kada je daljinski upravljač uključen, sistem će se automatski vratiti na prijašnje postavke uključujući način rada, postavke temperature, nivo brzine ventilatora i SLEEP funkciju (ako je aktivirana). I šalje signale jedinici.
- Ako pritišćete tipku duže od 2 sekunde, sistem će automatski obnoviti tekuće postavke uključujući način rada, postavke temperature, brzinu ventilatora i SLEEP funkciju (ako je aktivirana).

### ⑪ TIMER ON tipka

Pritisnite ovu tipku za postavljanje vremena uključivanja uređaja. Svaki pritisak će povećati vrijeme do uključivanja uređaja u koracima od 30 minuta. Kad prikaz postavljenog vremena pokazuje 10.0, svaki će pritisak povećati vrijeme u koracima od 60 minuta. Kako biste poništili vrijeme automatskog uključivanja, jednostavno postavite vrijeme uključivanja na 0.0.

### ⑫ TIMER OFF tipka

Pritisnite ovu tipku za postavljanje vremena isključivanja uređaja. Svaki pritisak će povećati vrijeme do isključivanja u koracima od 30 minuta. Kada prikaz postavljenog vremena pokazuje 10.0, svaki će pritisak povećati vrijeme u koracima od 60 minuta. Da biste poništili vrijeme automatskog isključivanja, jednostavno postavite vrijeme isključivanja na 0.0.

### ⑬ DIRECT tipka


Upotrebljava se za promjenu kretanja klapni i postavljanje željenog smjera ispuha zraka u smjeru gore/dolje. Svakim pritiskom klapna se pomiče za 6°C. NAPOMENA: Kod nekih modela upotrebljava se swing funkcija umjesto ove funkcije.

### ⑭ SWING tipka

Upotrebljava se da bi zaustavila ili započela auto swing funkciju vodoravne klapne. NAPOMENA: Kod nekih modela upotrebljava se da bi zaustavila ili započela auto swing okomite klapne.

- ⑮ FOLLOW ME tipka:** Pritisnite ovu tipku da bi pokrenuli Follow Me funkciju, daljinski upravljač pokazuje temperaturu na njegovom položaju. Daljinski upravljač će slati signal uređaju svake 3 minute sve dok ponovno ne pritisnete tipku FOLLOW ME. Ukoliko klima uređaj ne primi signal tijekom 7 minuta funkcija FOLLOW ME će se deaktivirati...

## Indikatori na zaslonu

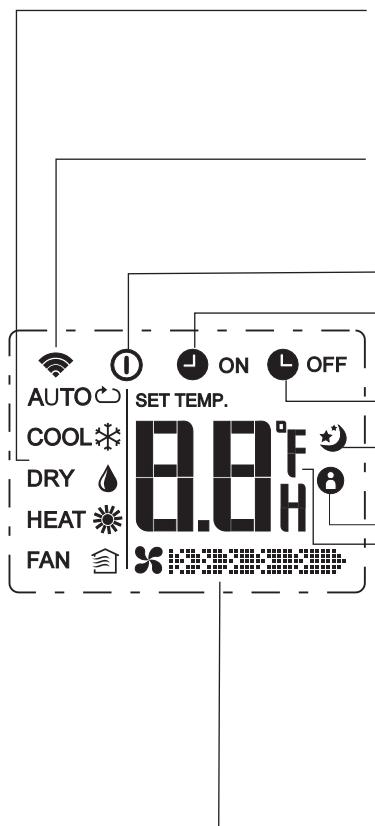

### Prikaz načina rada

Prikazuje odabrani način rada.

AUTO COOL DRY

HEAT FAN

### Indikator prijenosa

Prikazuje se kod prijenosa podataka, odnosno kada daljinski upravljač pošalje signal unutarnjoj jedinici.

### ON/OFF prikaz

Prikazuje se pritiskom na tipku ON/OFF (uključivanje/isključivanje uređaja)

### TIMER ON prikaz

Prikazuje se kada je podešeno vrijeme automatskog UKLJUČIVANJA.

### TIMER OFF prikaz

Prikazuje se kada je podešeno vrijeme automatskog ISKLJUČIVANJA.

### Sleep prikaz

Prikazuje se tijekom funkcije spavanja.

### FOLLOW ME prikaz (određeni modeli)

Pokazuje da se uređaj nalazi u načinu praćenja korisnika.

### Temp./Timer prikaz

Prikaz postavljene temperature (17°C~30°C). Kada se odabere način rada FAN, na zaslonu neće biti prikazana temperatura. Ako je postavljen TIMER, prikazuje vrijeme potrebno za ukj. / isklj.

### Pokazatelj brzine ventilatora

Prikazuje odabranu brzinu ventilatora.

AUTO - automatska (bez prikaza)

LOW - niska brzina

MED - srednja brzina

HIGH - visoka brzina

Prilikom automatskog načina rada (AUTO) i odvlaživanja (DRY), brzina ventilatora je postavljena na automatsku brzinu.

### Napomena

Ovi pokazatelji pojašnjavaju funkcije, no tijekom rada uređaja biti će prikazane samo uključene funkcije.

## Korištenje tipki na daljinskom upravljaču



### Automatski način rada

Pripazite da je jedinica uključena. Počet će titrati pokazatelj za funkcije na zaslonu.

1. Tipkom MODE odaberite automatski rad.
2. Tipkom UP/DOWN postavite željenu temperaturu. Razina temperature seže od 17°C-30°C u razmacima od 1°C.
3. Pritisnite tipku ON/OFF za pokretanje klima uređaja.

### NAPOMENA

1. Kod automatskog načina rada uređaj će automatski odabrati funkciju hlađenja ili grijanja, ovisno o stvarnoj temperaturi prostorije i postavci na daljinskom upravljaču.
2. Kod automatskog načina rada ne možete promijeniti brzinu ventilatora, zbog toga što je automatski odabran.
3. Ako vam ovaj način rada ne godi, odaberite način rada prema vašim preferencijama.

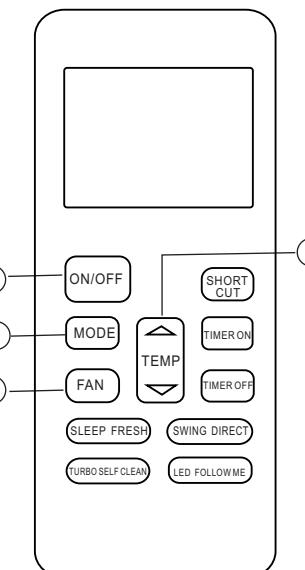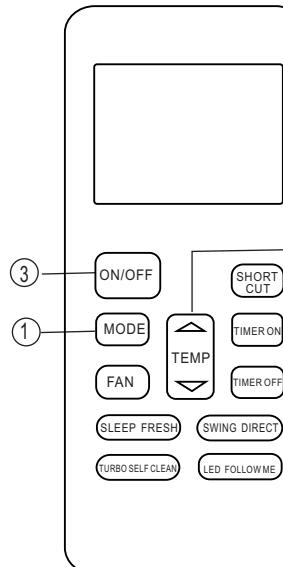


### Hlađenje/Grijanje/Ventilacija

Osigurajte da je uređaj priključen i da postoji dovod energije.

1. Pritisnite tipku MODE kako biste odabrali HLAĐENJE, GRIJANJE (samo za modele s grijanjem i hlađenje) ili VENTILACIJU.
2. Pritisnite tipke UP/DOWN kako biste postavili željenu temperaturu. Razina temperature seže od 17°C - 30°C u razmacima od 1°C.
3. Pritisnite tipku FAN kako biste odabrali jednu od 4 brzina ventilatora - automatsko, sporo, srednje ili brzo.
4. Pritisnite tipku ON/OFF za pokretanje klima uređaja.

### NAPOMENA

Kod VENTILACIJE na zaslonu nije prikazana postavka za razinu temperature te ne možete njome upravljati. U ovom slučaju mogući su samo koraci 1, 3 i 4.

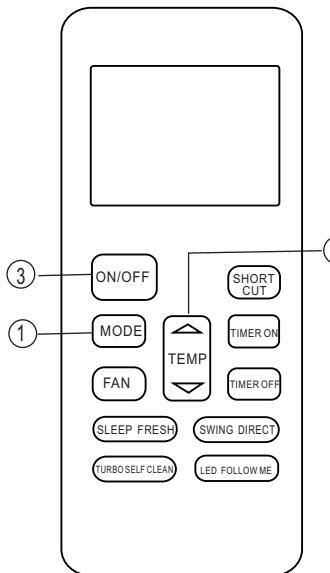

### Funkcija odvlaživanja

Pripazite da je jedinica uključena. Počet će titrati pokazatelj za funkcije na zaslonu.

1. Pritisnite tipku **MODE** kako biste odabrali ODVLAŽIVANJE (DRY).
2. Pritisnite tipke **UP/DOWN** za odabir željene temperature. Razina temperature seže od 17°C-30°C u razmacima od 1°C.
3. Pritisnite tipku **ON/OFF** za pokretanje klima uređaja.

#### NAPOMENA


Kod odvlaživanja ne možete mijenjati brzinu ventilatora, jer se njome automatski upravlja.

### Podešavanje smjera puhanja zraka

Koristite tipku SWING i DIRECT da bi podešili željeni smjer puhanja zraka.

1. Kada pritisnete tipku DIRECT, vodoravna klapna se pomiče za 6 stupnjeva svakim pritiskom.
2. Kada pritisnete tipku SWING, klapna će se automatski nijhati gore i dolje.

**NAPOMENA:** Kada klapna prilikom nijhanja dođe u položaj koji može utjecati na učinak hlađenja ili grijanja klima uređaja, automatski će promijeniti smjer nijhanja/ kretanja.

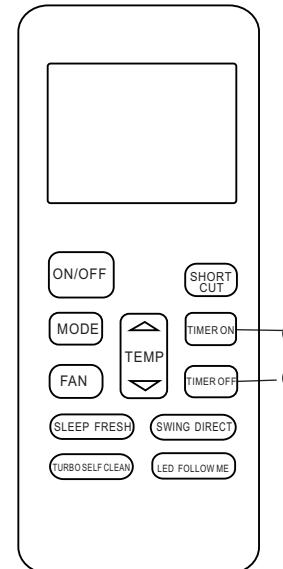

### Upravljanje vremenom

Pritisnite tipku **TIMER ON** kako biste postavili vrijeme za automatsko uključivanje uređaja. Pritisnite tipku **TIMER OFF** kako biste postavili vrijeme za automatsko isključivanje uređaja.

#### Postavljanje vremena za automatsko uključivanje


1. Pritisnite tipku **TIMER ON**. Daljinski upravljač će prikazati **TIMER ON**, zadnju automatsku postavku vremena i na LCD zaslonu će biti prikazano slovo "H". Sada ponovno postavite vrijeme i pokrenite tu funkciju.
2. Ponovno pritisnite tipku **TIMER ON** kako biste postavili željeno vrijeme za automatsko uključivanje uređaja. Svakim pritiskom tipke se vrijeme povećava za pola sata od 0-10 sati, a od 10-24 se vrijeme povećava za jedan sat.
3. Nakon podešavanja **TIMER ON** funkcije morate malo pričekati da daljinski upravljač pošalje signal klima uređaju. Nakon otprilike 2 sekunde, oznaka "h" će nestati i prikazat će se postavljena temperatura na LCD zaslonu.

#### Postavljanje vremena isključivanja

1. Pritisnite tipku **TIMER OFF**. Na daljinskom upravljaču prikazuje se **TIMER OFF**, te se na zaslonu prikazuje zadnje postavljeno vrijeme isključivanja i simbol "H". Sada možete postaviti vrijeme isključivanja klima uređaja.
2. Pritisnite opet tipku **TIMER OFF** da bi postavili željeno vrijeme isključivanja uređaja. Svakim pritiskom tipke vrijeme se povećava za pola sata između 0 i 10 sati i za 1 sat između 10 i 24 sata.
3. Nakon postavljanja vremena isključivanja proći će sekunda prije nego daljinski upravljač emitira signal klima uređaju. Zatim, nakon otprilike još 2 sekunde, simbol "H" će nestati i na zaslonu će se ponovno prikazati postavljena temperatura.

**POZOR**

- Po odabiru rada timera daljinski upravljač određeno vrijeme automatski šalje signal timera unutarnjoj jedinici. Stoga držite daljinski upravljač na mjestu s kojeg može neometano slati signal unutarnjoj jedinici.
- Vrijeme rada postavljeno putem daljinskog upravljača je ograničeno na slijedeće postavke: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

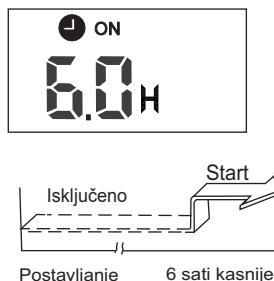**Primjer postavljanja brojača vremena****TIMER ON**


(Postavljanje automatskog uključivanja)

TIMER ON funkcija je korisna onda kada želite da se uređaj automatski uključi prije nego što stignete u svoj dom. Klima uređaj će se, u tom slučaju, automatski uključiti ovisno o vremenu koje ste postavili.

**Primjer:**

Uključivanje uređaja za 6 sati.

- Pritisnite tipku TIMER ON kako bi se prikazala posljednja postavka i oznaka "H" na zaslonu.
- Pritisnite tipku TIMER ON za prikaz oznake "6.0H" na TIMER ON prikazu na daljinskom upravljaču.
- Pričekajte 3 sekunde kako bi se na digitalnom prikazu ponovno pojavila temperatura. "TIMER ON" funkcija je i dalje aktivna.

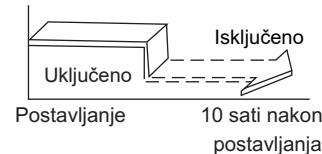
**TIMER OFF****(Postavljanje automatskog isključivanja)**

TIMER OFF funkcija je korisna kada želite da se uređaj isključi nakon što legnete navečer u krevet. Klima uređaj će se automatski isključiti ovisno o postavljenom vremenu.

**Primjer:**

Isključivanje uređaja za 10 sati.

- Pritisnite tipku TIMER OFF kako bi se prikazala posljednja postavka vremena i oznaka "H" na zaslonu.
- Pritisnite tipku TIMER OFF za prikaz oznake "10H" na TIMER OFF prikazu na daljinskom upravljaču.
- Pričekajte 3 sekunde kako bi se na digitalnom prikazu pojavila ponovno razina temperature. "TIMER OFF" pokazatelj je i dalje uključen i funkcija je aktivna.

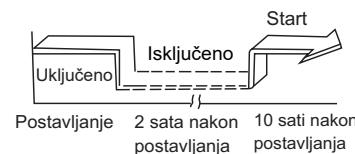**KOMBINIRANO POSTAVLJANJE VREMENA**

(Istovremeno postavljanje vremena za uključivanje i isključivanje)


**TIMER OFF → TIMER ON**

(Uključivanje → Zaustavljanje → Početak operacije)  
Ova je funkcija korisna onda kada želite isključiti klima uređaj nakon što odete spavati, te ga ponovno pokrenuti ujutro kada se probudite ili kada se vratite u svoj dom nakon posla.

**Primjer:**

Za isključivanje uređaja 2 sata nakon postavljanja i ponovo uključivanje nakon 10 sati.

- Pritisnite tipku TIMER OFF.
- Ponovo pritisnite tipku TIMER OFF za prikaz oznake 2.0H na TIMER OFF prikazu.
- Pritisnite tipku TIMER ON.
- Ponovo pritisnite tipku TIMER ON za prikaz 10H na TIMER ON prikazu.
- Pričekajte 3 sekunde kako bi se na digitalnom zaslonu ponovno prikazala temperatura. "TIMERON OFF" pokazatelj će ostati uključen, a funkcija će se aktivirati.

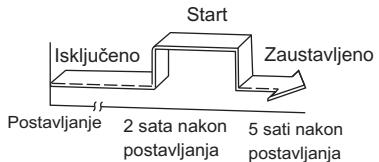

#### TIMER ON → TIMER OFF

(Isklj. → Start → Isključivanje funkcije)

Ova je značajka korisna kada želite uključiti klima uređaj prije buđenja i isključiti ga nakon što izađete iz doma.

#### Primer:

Za uključivanje uređaja 2 sata nakon isključivanja 5 sati nakon te postavke.

1. Pritisnite tipku **TIMER ON**.
2. Ponovno pritisnite tipku **TIMER ON** za prikaz oznake 2.0H na **TIMER ON** prikazu.
3. Pritisnite **TIMER OFF** tipku.
4. Ponovno pritisnite tipku **TIMER OFF** za prikaz oznake 5.0H na **TIMER OFF** prikazu.
5. Pričekajte 3 sekunde kako bi se ponovno prikazala razina temperature na zaslonu. "TIMER ON & TIMER OFF" pokazatelj će ostati i dalje uključen i funkcija će biti aktivirana.

#### NAPOMENA:

- Tipke se mogu razlikovati ovisno o modelu.

- Sve opisane funkcije su u skladu s unutarnjom jedinicom. Ako unutarnja jedinica nema neku funkciju, a pritisnemo tipku za tu funkciju na daljinskom upravljaču, neće se ništa dogoditi.



# **UPUTSTVA ZA KORIŠTENJE**

## **USER MANUAL**

**ZE-09WSE**

**ZE-09OSE**

**ZE-12WSE**

**ZE-12OSE**

**ZE-18WSE**


**ZE-18OSE**

Thank you very much for purchasing our air conditioner.  
Please read this owner's manual carefully before using  
your air conditioner. Make sure to save this manual for  
future reference.

## CONTENTS

Handling the remote controller .....	2
Remote controller Specifications.....	3
Function buttons .....	5
Indicators on LCD .....	7
How to use the buttons .....	8
Auto operation.....	8
Cooling/Heating/Fan operation.....	8
Dehumidifying operation .....	9
Adjusting air flow direction.....	9
Timer operation.....	10

### Handling the remote controller

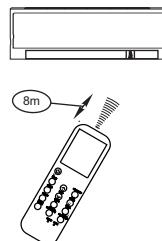

#### Location of the remote controller.

- Use the remote controller within a distance of 8 meters from the appliance, pointing it towards the receiver. Reception is confirmed by a beep.

#### ▲CAUTIONS

- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit.
- Prevent any liquid from falling into the remote controller. Do not expose the remote controller to direct sunlight or heat.
- If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote controller, either move these appliances or consult your local dealer.
- Replace the batteries when there is no answering beep from the indoor unit or if the transmission indicator light fails to light.

### Replacing batteries

The remote controller is powered by two dry batteries(R03/LR03X2) housed in the rear part and protected by a cover.

- (1) Remove the cover by pressing and sliding off.
- (2) Remove the old batteries and insert the new batteries, placing the(+) and (-) ends correctly.
- (3) Reattach the cover by sliding it back into position.

**NOTE:** When the batteries are removed, the remote controller erases all programming. After inserting new batteries, the remote controller must be reprogrammed.

#### ▲CAUTIONS


- Do not mix old and new batteries or batteries of different types.
- Do not leave the batteries in the remote controller if they are not going to be used for 2 or 3 months.
- Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

## **Remote Controller Specifications**

Model	RG52A1/BG(C)EF
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C~60°C

## **Performance Feature**


1. Operating Mode: AUTO, COOL, DRY, HEAT(Cooling only model without), and FAN.
2. Timer Setting Function in 24 hours.
3. Indoor Setting Temperature Range : 17°C~30°C.
4. Full function of LCD (Liquid Crystal Display).

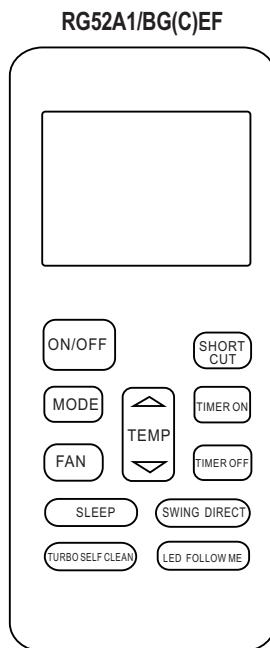

### **NOTE:**

- Buttons design might be slightly different from the actual one you purchased depending on individual models.
- All the functions described are accomplished by the indoor unit. If the indoor unit has no this feature, there is no corresponding operation happened when press the relative button on the remote controller.

## Function buttons

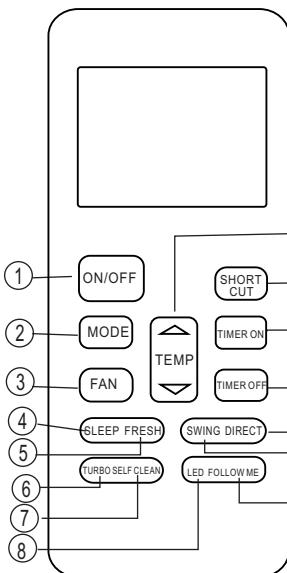

### ① ON/OFF Button

Operation starts when this button is pressed and stops when this button is pressed again.

### ② MODE Button

Each time the button is pressed, the operation mode is selected in a sequence of following:

AUTO → COOL → DRY → HEAT → FAN

**NOTE:** Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

### ③ FAN Button

Used to select the fan speed in four steps:  
AUTO → LOW → MED → HIGH

### ④ SLEEP Button

- Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only .
- For the detail, see "sleep operation" in "USER'S MANUAL".

**NOTE:** While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

### ⑤ FRESH Button

Active/Disable FRESH function. When the FRESH function is initiated, the Ionizer/Plasma Dust Collector(depending on models) is energized and will help to remove pollen and impurities from the air.

### ⑥ TURBO Button

Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)

### ⑦ SELF CLEAN Button

Active/Disable Self Clean function

### ⑧ LED Button

Disable/Active indoor screen Display. When pushing the button, the indoor screen display is cleared, press it again to light the display.

### ⑨ UP Button( ▲ )

Push this button to increase the indoor temperature setting in 1°C increments to 30°C.

### DOWN Button( ▼ )

Push this button to decrease the indoor temperature setting in 1°C increments to 17°C.

### ⑩ SHORTCUT Button

- Used to restore the current settings or resume previous settings.
- On the first time connecting to the power, if push the SHORTCUT button, the unit will operate on AUTO mode, 26°C, and fan speed is Auto.
- Push this button when remote controller is on, the system will automatically revert back to the previous settings including operating mode, setting temperature, fan speed level and sleep feature(if activated). And transmit the signals to the unit.
- If pushing more than 2 seconds, the system will automatically restore the current operation settings including operating mode, setting temperature, fan speed level and sleep feature(if activated ).

### ⑪ TIMER ON Button

Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

### ⑫ TIMER OFF Button

Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0

### ⑬ DIRECT Button

Used to change the louver movement and set the desired up/down air flow direction. The louver changes 6° in angle for each press.

NOTE: On some models operate swing feature instead of this feature.

### ⑭ SWING Button


Used to stop or start horizontal louver auto swing feature.

NOTE; On some models used to stop or start vertical louver auto swing feature.

### ⑮ FOLLOW ME Button:

Push this button to initiate the Follow Me feature, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner every 3 minutes interval until press the Follow Me button again. The air conditioner will cancel the Follow Me feature automatically if it does not receive the signal during any 7 minutes interval.

## Indicators on LCD

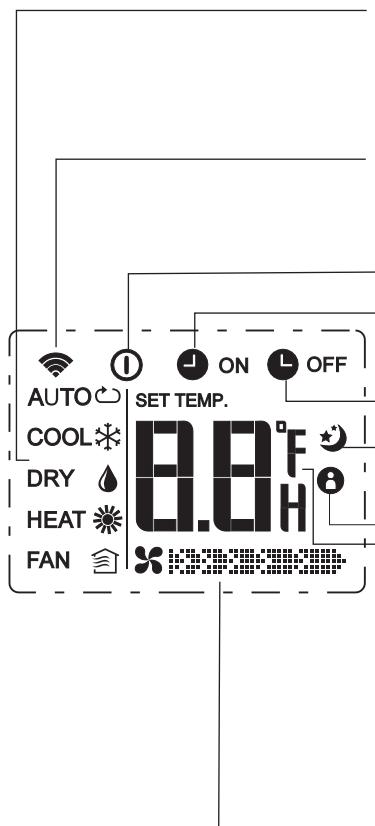

### Mode display

Displays the current operation mode. Including auto(  ), cool(  ), dry(  ), heat(  ) (Not applicable to cooling only models), fan(  ) and back to auto(  ).

### Transmission Indicator

This transmission indicator lights when remote controller transmits signals to the indoor unit.

### ON/OFF display

Displayed by pressing the ON/OFF button. Press the ON/OFF button again to remove.

### TIMER ON display

Displayed when TIMER ON time is set.

### TIMER OFF display

Displayed when TIMER OFF time is set.

### Sleep Display

Displayed under sleeping operation. Press the SLEEP button again to remove.

### FOLLOW ME Display(on some models)

Displayed when FOLLOW ME function is activated.

### Temp./Timer display

Displays the temperature setting(17°C~30°C). When you set the operating mode to FAN, no temperature setting is displayed. And if in the TIMER mode, shows the ON and OFF settings of the TIMER.

### Fan speed display

Displays the selected fan speed, AUTO(no display) and three fan speed levels "  " (LOW) "  " (MED) "  " (HIGH) can be indicated. The fan speed is AUTO when the operating mode is either AUTO or DRY.

### Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display window.

## How to use the buttons



### Auto operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the **MODE** button to select Auto.
2. Press the **UP/DOWN** button to set the desired temperature. The temperature can be set within a range of 17°C~30°C in 1°C increments.
3. Press the **ON/OFF**button to start the air conditioner.

### NOTE

1. In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting temperature on the remote controller.
2. In the Auto mode, you can not switch the fan speed. It has already been automatically controlled.
3. If the Auto mode is not comfortable for you , the desired mode can be selected manually.

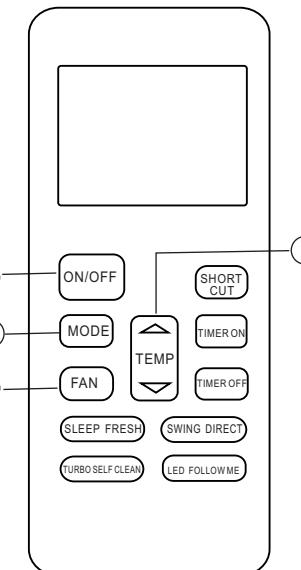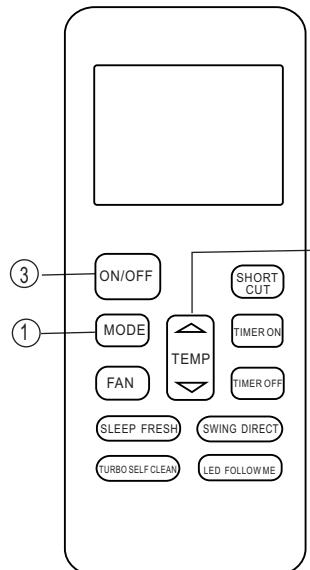


### Cooling /Heating/Fan operation

Ensure the unit is plugged in and power is available.

1. Press the **MODE** button to select COOL, HEAT(cooling & heating models only) or FAN mode.
2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 17°C~30°C in 1°C increments.
3. Press the **FAN** button to select the fan speed in four steps- Auto, Low, Med,or High.
4. Press the **ON/OFF** button to start the air conditioner.

### NOTE

In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

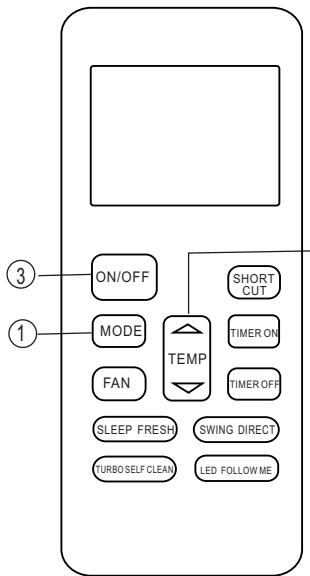

### **Dehumidifying operation**

- Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.
1. Press the **MODE** button to select DRY mode.
  2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 17°C~ 30°C in 1°C increments.
  3. Press the **ON/OFF** button to start the air conditioner.

#### **NOTE**


*In the Dehumidifying mode, you can not switch the fan speed. It has already been automatically controlled.*

### **Adjusting air flow direction**

Use the SWING and DIRECT button to adjust the desired airflow direction.

1. When push the DIRECT button, the horizontal louver changes 6 degree in angle for each push.  
**NOTE:** On some models operate swing feature instead of this feature.
2. When push the SWING button, the louver will swing up and down automatically.

**NOTE:** When the louver swing or move to a position which would affect the cooling or heating effect of the air conditioner, it would automatically change the swing/moving direction.

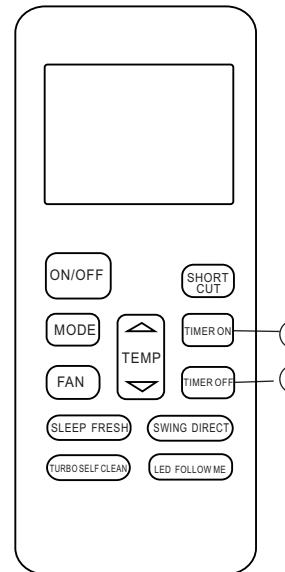

### **Timer operation**

Press the TIMER ON button can set the auto-on time of the unit. Press the TIMER OFF button can set the auto-off time of the unit.

#### **To set the Auto-on time.**


1. Press the **TIMER ON** button. The remote controller shows **TIMER ON**, the last Auto-on setting time and the signal "H" will be shown on the LCD display area. Now it is ready to reset the Auto-on time to START the operation.
2. Push the **TIMER ON** button again to set desired Auto-on time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the **TIMER ON**, there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "h" will disappear and the set temperature will re-appear on the LCD display window.

#### **To set the Auto-off time.**

1. Press the **TIMER OFF** button. The remote controller shows **TIMER OFF**, the last Auto-off setting time and the signal "H" will be shown on the LCD display area. Now it is ready to reset the Auto-off time to stop the operation.
2. Push the **TIMER OFF** button again to set desired Auto-off time. Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.
3. After setting the **TIMER OFF**, there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "H" will disappear and the set temperature will re-appear on the LCD display window.

**CAUTION**

- The effective operation time set by the remote controller for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

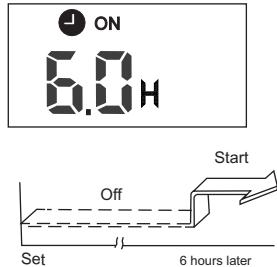
**Example of timer setting****TIMER ON  
(Auto-on Operation)**

The TIMER ON feature is useful when you want the unit to turn on automatically before you return home. The air conditioner will automatically start operating at the set time.

**Example:**

To start the air conditioner in 6 hours.

- Press the TIMER ON button, the last setting of starting operation time and the signal "H" will show on the display area.
- Press the TIMER ON button to display "6.0H" on the TIMER ON display of the remote controller.
- Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON" indicator remains on and this function is activated.

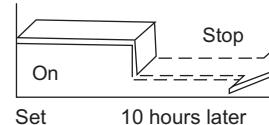

Set      On      Stop  
10 hours later

**TIMER OFF****(Auto-off Operation)**

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

**Example:**

To stop the air conditioner in 10 hours.

- Press the TIMER OFF button, the last setting of stopping operation time and the signal "H" will show on the display area.
- Press the TIMER OFF button to display "10H" on the TIMER OFF display of the remote controller.
- Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER OFF" indicator remains on and this function is activated.

**COMBINED TIMER**

(Setting both ON and OFF timers simultaneously)

**TIMER OFF → TIMER ON**


(On → Stop → Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

**Example:**

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

- Press the TIMER OFF button.
- Press the TIMER OFF button again to display 2.0H on the TIMER OFF display.
- Press the TIMER ON button.
- Press the TIMER ON button again to display 10H on the TIMER ON display.
- Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON OFF" indicator remains on and this function is activated.

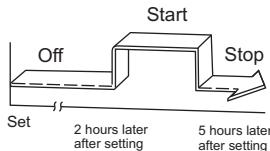

#### TIMER ON → TIMER OFF (Off → Start → Stop operation)

This feature is useful when you want to start the air conditioner before you wake up and stop it after you leave the house.

##### Example:

To start the air conditioner 2 hours after setting, and stop it 5 hours after setting.

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0H on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0H on the TIMER OFF display .
5. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON OFF" indicator remains on and this function is activated.

#### **NOTE:**

- Buttons design is based on typical model and might be slightly different from the actual one you purchased, the actual shape shall prevail.
- All the functions described are accomplished by the unit, if the unit has no this feature, there is no corresponding operation happened when press the relative button on the remote controller.
- When there are wide differences between "Remote controller Illustration" and "USER'S MANUAL" on function description, the description on "USER'S MANUAL" shall prevail.
- The device could comply with the local national regulations. In Canada, it should comply with CAN ICES-3(B)/NMB-3(B). In USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not approved by the party responsible for compliance could void suer's authority to operate the equipment.

**For Inquiries, Please Contact:**

Name of company: Alfasol d.o.o.

Address: Ulica kneza Branimira 189, 10040 Zagreb, Croatia

Tel. number: + 385 (0)1 292 29 84

E-mail: [info@alfasol.hr](mailto:info@alfasol.hr)