


AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS

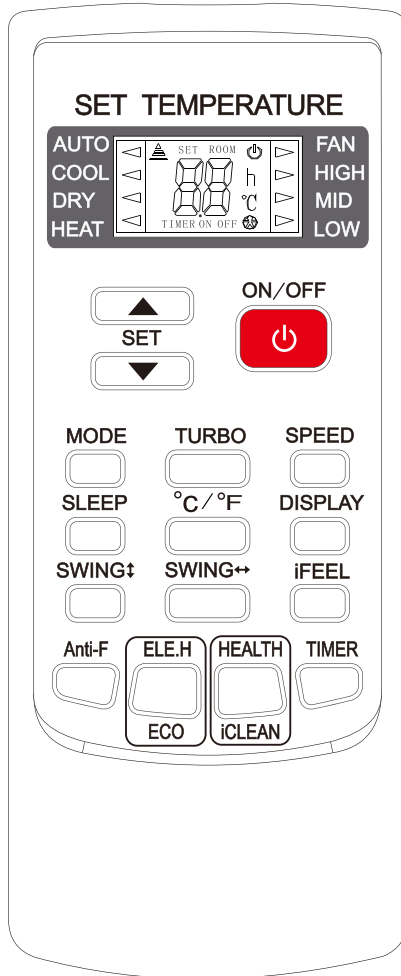

- Carefully read these “instructions” for safe and correct use of the air-conditioner.
- Carefully keep the “instructions” manual as it can be referred to at any time.

CONTENTS

Precautions	1
Buttons description	2
Usage	6
Fix batteries	6
Automatic operation mode	6
Cooling/Heating operation mode	6
Fan operation mode	7
Drying operation mode	7
Backlight Function	7


Precautions

- Before first time use of the remote controller, install the batteries and ensure that the “+” and “-” poles are correctly positioned.
- Ensure the remote controller is pointed to the signal receiving window, and that there is no obstruction in between and the distance is 8m at the maximum.
- Do not let the remote controller drop or fling it at will.
Do not let any liquid in the remote controller.
Do not expose the remote controller directly to the sunlight or excessive heat.
- If the remote controller does not work normally, remove the batteries for 30 seconds before reinstall them. If that doesn't work, replace the batteries.
- When replacing the batteries, do not mix the new batteries with old ones or mix batteries of different types, which could cause failure of the remote controller.
- If the remote controller is not to be used for a long period of time, remove the batteries first, lest the leakage from them may damage the remote controller.
- Properly dispose the discarded batteries.

Note:

- 1. This is a universal remote controller which provides all the function of buttons. Please understand that some of the buttons may not function, depending on the specific air conditioner you have purchased. (If a specific function is not available on the air conditioner, pressing the corresponding button will simply have no respond.)**
- 2. HEAT and ELE.H functions are not available for cool only models, thus these two buttons do not work correspondingly.**

Buttons description

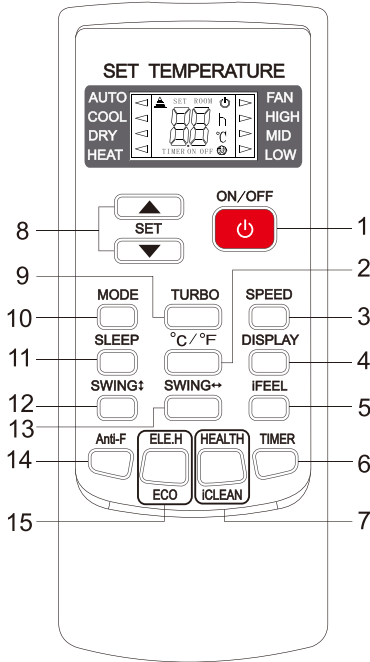

Note:

The remote controller display all symbols during power-on and only those corresponding to current operation the rest of the time.

1. ON/OFF

- * Press this button to turn on/off the unit.
- * This will clear the existing timer and SLEEP settings.

2. °C/°F

- * Press this button to set the temperature display to Fahrenheit, which is displayed by default in Celsius. The “C” will not be displayed on the LCD.
- * Press this button again to restore the temperature display to Celsius.

Note: Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.

3. SPEED

- * Press this button, you can select the fan speed as follows:

→ Low → Mid → High → Auto

Note: AUTO air speed is not available in FAN mode.

Buttons description

4. DISPLAY

- * Press this button to turn on/off the display. This is for the convenience of users who are unconformable sleeping with the backlight on.

5. iFEEL

- * Press this button to set the temperature display on the remote controller to ambient temperature and press this button again to set it to preset temperature.

6. TIMER

- * With the unit ON, press this button to set OFF timer or with it OFF to set ON timer.
- * Press this button once, a “ON(OFF)” will flash. Press “▲” or “▼” to set the number of hours in which the unit will be turned ON/OFF, with an interval of 0.5 hour if less than 10 hours, or 1 hour if longer than 10 hours , and a range of 0.5-24 hours.
- * Press it again to confirm the setting, the “ON (OFF)” will stop flashing.
- * If the timer button is not pressed longer than 10 seconds after the “ON (OFF)” start flashing, the timer setting will be exited.
- * If a timer setting is confirmed, pressing this button again will cancel it.

Note: When a ON timer is set, all function buttons (except SLEEP, DISPLAY and iFEEL can't be set) are valid and when the ON time set is up, the unit will operate as preset.

7.  This button has two functions.

a. HEALTH

- * Press this button with the unit ON to activate health related functions, such as negative ion, electrostatic precipitation, PM2.5 removal, etc, depending on the actual configuration of each model.
- * Press this button again to deactivate the HEALTH function.

b. iCLEAN

- * Press this button with the unit OFF, the remote controller will display “CL” and the unit will automatically clean dust off the evaporator and dry it, to increase the cooling and heating efficiency.

Buttons description

- * The iCLEAN function runs for approximately 30 minutes, during which if the unit is turned on with the remote controller or this button is pressed again, the iCLEAN will be deactivated.

8. ▲ or ▼

- * Each time the “▲” is pressed, the temperature setting will increase by 1°C and each time the “▼” is pressed, it will decrease by 1°C.
- * a.If the type of controller remote is YKR-H/101E or YKR-H/102E , setting temperature range is 16°C~32°C(60°F~90°F).
- b.If the type of controller remote is YKR-H/132E, setting temperature range is 20°C~28°C (68°F~82°F).
- c.Some area don't have the YKR-H/132E. Local regulation and actual object shall prevail.

Note: The temperature cannot be set in AUTO or FAN mode, thus these two buttons are not functional.

9. TURBO

- * Press this button only in COOL or HEAT mode to set TURBO on or off to speedy the cooling or heating.
- * When TURBO is on, the air speed is HIGH.
- * When TURBO is off, the air speed will restore to previous status.

10. MODE

- * Press this button, you can select the running mode as follows:

┌→AUTO→COOL→DRY→HEAT→FAN┐

Note: HEAT mode is not available for cool only units.

11. SLEEP

- * Press this button to enter SLEEP mode, which the unit will exit after 10 hours of continuous operation and restore to the previous status.

Note:The SLEEP function cannot be activated in FAN mode.

12. SWING ↓

- * Press this button to activate up/down swing and press it again to fix the swing position.

13. SWING ↔

- * Press this button to activate left/right swing and press it again to fix the swing position.

Buttons description

14 .Anti-F

- * The Anti-F functions when the unit is turned off with the remote controller in COOL, DRY or AUTO mode. It will operate in HEAT mode (FAN mode for cool only units), with the internal fan running with weak flow for 3 minutes before stop, to remove the moisture within the evaporator so as to prevent it from giving off bad smell from mold.
- * This function is not set in the factory. You may set it or cancel it any time you want as follows: With both the unit and the remote controller OFF, point the remote controller at the unit and press “Anti-F” button once, the buzzer will sound 5 times after 5 times, indicating this function is set. Once set, this function will remain valid except when the unit is power off or until it is canceled.
- * To cancel Anti-F:
 1. Power off the unit.
 2. With both the unit and the remote controller OFF, point the remote controller at the unit and press this button once, the buzzer will sound 3 times after 5 times, indicating this function is canceled.

Note:

- * **With Anti-F activated, it is advised not to turn ON the unit again before it is fully OFF.**
- * **Anti-F function will be invalid when OFF timer is set.**

15.  This button has two functions.

a. ELE.H


- * If this button is pressed in HEAT mode, the electric heating will be turned on/off.

b. ECO

- * If this button is pressed in COOL mode, the unit will enter the ECO mode which has the lowest electricity consumption, and exit it automatically 8 hours after.
- * Changing modes or turning off the remote controller will automatically cancel the ECO function.
- * Press ECO button in ECO mode to exit this mode.

Note: The ECO mode only works for inverter units.

★ Fix batteries

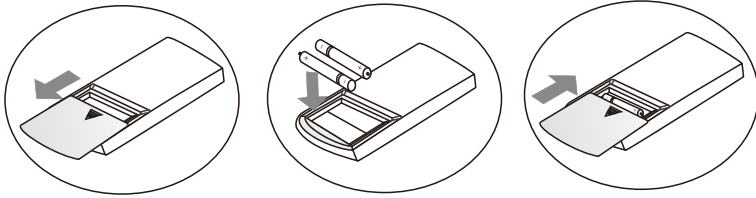

1. Slide to open the cover according to the direction indicated by the arrowhead.
2. Insert two brand new batteries (7#), and position the batteries to the right electric poles (+ & -).
3. Put back the cover.

★ Automatic operation mode

1. Press the “MODE” button, select the automatic operation mode.
2. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
3. Press the “ON/OFF” button, the air-conditioner starts to operate.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the fan operation mode, the temperature settings is non-effective.

★ Cooling/Heating operation mode

1. Press the “MODE” button, select the Cooling or Heating operation mode.
2. By pressing the “▲” or “▼” button, you can set the temperature, the display changes as you touch the button.
3. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
4. Press the “ON/OFF” button, the air-conditioner starts to operate.
5. Press the “ON/OFF” button again, the air-conditioner stops.

Note: The cold wind type has no heating function.

Usage

★ Fan operation mode

1. Press the “MODE” button, select the fan operation mode.
2. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH.
3. Press the “ON/OFF” button, the air-conditioner starts to operate.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the fan operation mode, the temperature settings is non-effective.

★ Drying operation mode


1. Press the “MODE” button, select the drying operation mode.
2. By pressing the “▲” or “▼” button, you can set the temperature, the display changes as you touch the button.
3. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
4. Press the “ON/OFF” button, the air-conditioner starts to operate.
5. Press the “ON/OFF” button again, the air-conditioner stops.

★ Backlight function (for remote controllers with such function only)

The remote controller has a backlight which can be turned on by pressing any button for the convenience of operation in darkness. The backlight will be automatically turned off if there is no operation within 10 seconds.

DALJINSKI UPRAVLJAČ ZA KLIMA UREĐAJ

UPUTE

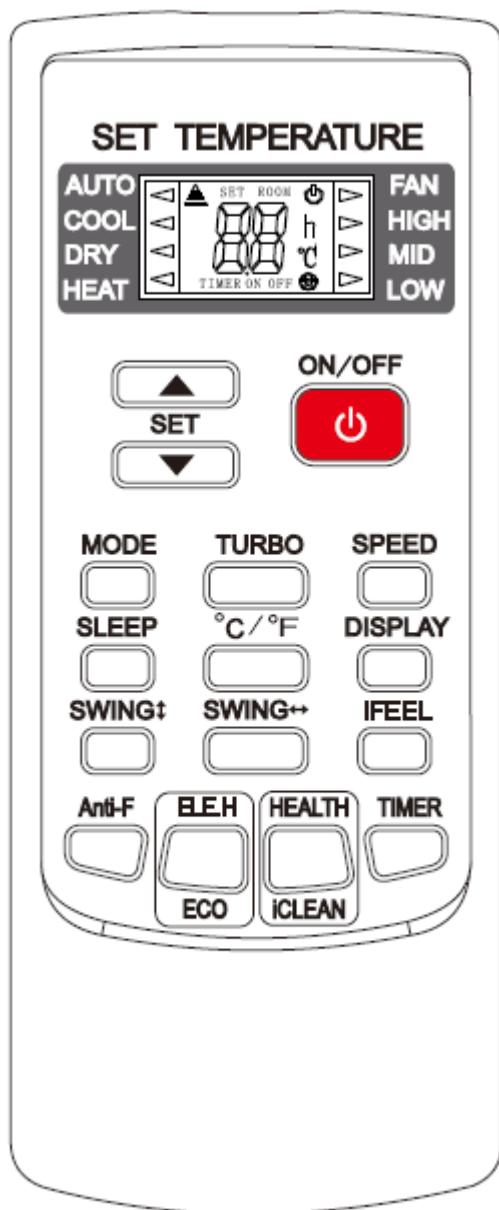

Mjere opreza.....	2
Opis funkcija tipki.....	3
Postavljanje baterija	8
Automatski način rada	8
Način rada – hlađenje/grijanje	8
Način rada – ventilator	9
Način rada – sušenje.....	9
Funkcija pozadinskog osvjetljenja.....	9


Mjere opreza

- Prije prve uporabe daljinskog upravljača postaviti baterije, pazeći pri tome na polaritet.
- Daljinski upravljač treba usmjeriti na dio za prijem signala klima uređaja, pazeći da između daljinskog upravljača i uređaja nema zapreka. Najveća udaljenost između festivala je 8 m.
- Paziti, da upravljač ne padne, te da u njega ne dospije tekućina. Ne izlagati daljinski upravljač direktnom, sunčevom svjetlu, niti velikoj toplini.
- Ukoliko daljinski upravljač ne radi normalno, izvadite baterije, te ih nakon 30 sek. ponovno vratite na mjesto. Ako i tada ne radi, zamijenite baterije.
- Kod zamjene baterija ne miješati stare i nove baterije, niti baterije različitih vrsta.
- Ukoliko se daljinski upravljač ne koristi dulje vrijeme, najprije treba izvaditi baterije, jer curenje baterija može oštetiti uređaj.
- Rabljene baterije treba zbrinjavati sukladno lokalnim propisima.

Opaska:

1. Ovo je univerzalni daljinski upravljač koji ima sve tipke. Neke od tipki možda ne djeluju, ovisno o vrsti klima uređaja.
2. HEAT (grijanje) i ELE.H funkcije nisu na raspolaganju za modele koji samo hlade, pa ni odgovarajuće tipke ne djeluju.

Opis funkcija tipki

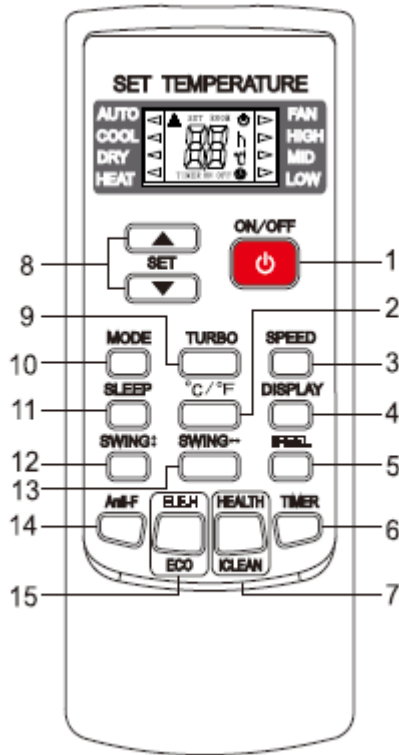

Opaska:

Daljinski upravljač prikazuje sve simbole kada je uključen a samo one koji odgovaraju trenutnoj radnji u ostatku vremena

1. ON/OFF – U/I

- Pritisnuti tipku za uključivanje, odn. isključivanje klima uređaja.
- Pritisak na tipku briše postavke timera i SLEEP (uspavljivanje) funkcije.

2. °C/°F

- Pritiskom na tipku temperatura se prikazuje u stupnjevima Fahrenheita , a tvornička postavka je u stupnjevima Celzijusa. Oznaka „C“ se ne prikazuje na ekranu.
- Ponovnim pritiskom na ovu tipku prikaz se vraća u °C.

Opaska: Kod nekih modela nema prikaza u „°F. Kada se temperatura prikazuje u °F na daljinskom upravljaču, na uređaju se to odnosi na °C.

3. SPEED – BRZINA

Pritiskom na ovu tipku odabire se brzina ventilatora slijedećim redoslijedom:

↳ Low → Mid → High → Auto

Mala-Srednja-Velika-Auto

Opaska: AUTO brzina strujanja zraka ne radi u načinu rada FAN (ventilator).

4. DISPLAY – PRIKAZ

- Pritiskom na ovu tipku uključuje se / isključuje ekran. To odgovara korisnicima kojima smeta spavanje s uključenim pozadinskim svjetlom ekrana.

5. iFEEL – OSJEĆAM

- Pritiskom na ovu tipku postavlja se prikaz temperature na daljinskom upravljaču na temperaturu okoliša, a ponovnim pritiskom na tipku temperatura se vraća na prethodno postavljenu vrijednost.

6. TIMER

- Kada je uređaj UKLJ, pritiskom na ovu tipku timer se isključuje, a ako je uređaj ISKLJ timer se uključuje.
- Jednim pritiskom na ovu tipku treperi „ON (OFF)“ . Pritiskom na „▲“ ili „▼“ postavlja se broj sati tijekom kojih je uređaj U/I u razmacima od 0,5 h, ako je vrijednost manja od 10 h ili u razmaku od 1 h, ako je vrijednost veća od 10 h i to u rasponu od 0,5 – 24 sata.
- Novim pritiskom na tipku potvrđuje se postavka, te „ON (OFF)“ prestaje treperiti.
- Ukoliko tipka timera nije pritisnuta dulje od 10 sek nakon što „ON (OFF)“ počinje treperiti izlazi se iz funkcije postavljanja timera.
- Ukoliko se potvrdi postavka timera, novi pritisak na ovu tipku poništava postavke.

Opaska:

Nakon što je postavljen ON (UKLJ) timer, sve tipke (osim SLEEP (uspavljivanje), DISPLAY (EKTRAN) i iFEEL (osjećam) koje se ne mogu postaviti) djeluju i kada se postavi ON (UKLJ) vrijeme, uređaj radi sukladno postavljenoj vrijednosti.



Ova tipka ima dvije funkcije.

a. HEALTH – ZDRAVLJE

- Pritiskom na ovu tipku, kada je uređaj uključen, aktivira se funkcija zdravlja, koja uključuje negativne ione, elektrostatičko taloženje, uklanjanje PM2,5 itd , ovisno o konfiguraciji svakog modela.
- Ponovnim pritiskom deaktivira se funkcija HEALTH

b. iCLEAN – IČIŠĆENJE

- Pritiskom na ovu tipku kada je uređaj isključen, na daljinskom se prikaže „CL“, pa uređaj automatski čisti prašinu iz evaporatora i suši ga , te povećava učinkovitost hlađenja i grijanja.
- Funkcija iCLEAN radi oko 30 min, a tijekom tog vremena je uređaj uključen putem daljinskog upravljača. Ponovnim pritiskom na navedenu tipku, funkcija se deaktivira.

8. ▲ ili ▼

- Svaki pritisak na „▲“ postavka temperature se povećava za 1 °C, a pritiskom na „▼“ smanjuje se za 1 °C.
- Raspon postavke temperature za daljinske upravljače YKR-H/101E ili YKR-H/102E je 16-32 °C.
Temperaturno područje za daljinski YKR-H/132E je 20-28 °C.
U nekim područjima svijeta se ne isporučuje YKR-H/132E model.

Opaska:


Temperatura se ne može postaviti u načinu rada AUTO ili FAN, jer ove tipke ne djeluju.

9. TURBO

- Pritisnuti ovu tipku samo u načinu rada COOL (hlađenje) ili HEAT (grijanje) kako bi se postavio ili isključio TURBO – brzi način puhanja zraka.
- Kada je TURBO uključen brzina zraka je velika.
- Kada je TURBO isključen brzina zraka se vraća na prethodnu vrijednost.

10. MODE – NAČIN RADA

Pritiskom na ovu tipku odabire se način rada slijedećim redoslijedom.



Auto-Hlađenje-Sušenje-Grijanje-Ventilator

Opaska:

HEAT (grijanje) način rada ne djeluje na uređajima koji imaju samo hlađenje.

11. SLEEP – USPAVLJIVANJE

- Pritiskom na ovu tipku ulazi se u način rada SLEEP, a iz njega uređaj izlazi nakon 10 h kontinuiranog rada i vraća se u prethodno stanje.

Opaska:

SLEEP funkcija se ne može aktivirati u načinu rada FAN (ventilator).

12. SWING ↑ - NJIHANJE

- Pritiskom na ovu tipku aktivira se zakret krilaca gore/dolje, a ponovnim pritiskom položaj krilaca ostaje fiksiran.

13. SWING ↔ – NJIHANJE

- Pritiskom na ovu tipku aktivira se zakret krilaca lijevo/desno, a ponovnim pritiskom položaj krilaca ostaje fiksiran.

14. Anti –F

- Ova funkcija je isključena daljinskim upravljačem u načinu rada COOL (hlađenje), DRY (sušenje) ili AUTO. Ona radi u načinu rada HEAT (grijanje) (FAN način rada za uređaje koji imaju samo hlađenje), pri čemu unutarnji ventilator slabo radi 3 minute prije zaustavljanja, kako bi uklonio vlagu u evaporatoru, te time spriječio stvaranje lošeg mirisa ili plijesni.

- Ova funkcija nije tvornički postavljena. Postaviti ju možete ili poništiti bilo kada na slijedeći način: Klima uređaj i daljinski upravljač su u položaju OFF (ISKLJ), usmjerite daljinski na klima uređaj, te jednom pritisnite tipku „Anti-F“, a zujalo se javlja 5 puta, nakon 5 min, što je znak da je funkcija postavljena. Kada je funkcija postavljena ona ostaje aktivna, osim kod isključivanja napajanja ili ako ju se poništi.
- Poništenje „Anti-F“ funkcije:
 1. Isključiti napajanje
 2. Kada je klima uređaj i daljinski upravljač u položaju OFF (ISKLJ), usmjeriti daljinski upravljač na uređaj, pa jednom pritisnuti tipku, a zujalo se javlja 3 puta nakon 5 min, što je znak da je funkcija poništena.

Opaska:

- **Anti - F aktiviran – preporučuje se ne uključivati ponovno uređaj prije nego što je potpuno isključen.**
- **Anti – F ne djeluje kada je timer postavljen na OFF(ISKLJ).**

15.



Ova tipka ima dvije funkcije

a. ELE.H

- Ukoliko se ova tipka pritisne u načinu rada HEAT (grijanje) električno grijanje se uključuje/isključuje.

b. ECO

- Ukoliko se ova tipka pritisne u načinu rada COOL (hlađenje) uređaj prelazi u ECO način rada, pri čemu minimalno troši struju i iz njega izlazi automatski nakon 8 h.
- Promjenom načina rada ili isključivanjem daljinskog upravljača automatski se poništava ECO funkcija.
- Pritiskom na ECO tipku u ECO načinu rada izlazi se iz navedenog načina rada.

Opaska: ECO način rada radi samo kod inverterskih jedinica.

Postavljanje baterija



1. Povlačenjem izvucite poklopac u smjeru strelice
2. Umetnite dvije nove baterije (7#) pazeći na polaritet.
3. Gurnite poklopac na mjesto

Automatski način rada

1. Pritisnite tipku „MODE-NAČIN RADA“, te odaberite automatski način rada.
2. Pritiskom na „SPEED-BRZINA“ odabire se brzina ventilatora između mala-srednja-velika-auto.
3. Pritisnite ON (UKLJ)/OFF (ISKLJ) tipku kako bi pokrenuli klima uređaj.
4. Ponovnim pritiskom na ON (UKLJ)/OFF (ISKLJ) tipku zaustavlja se rad klima uređaja.

Opaska: U načinu rada FAN (ventilator) ne djeluje funkcija postavke temperature.

Način rada – hlađenje/grijanje

1. Pritisnite „MODE_NAČIN RADA“ te odaberite hlađenje ili grijanje.
2. Pritiskom na „▲“ ili „▼“ postavlja se željena temperatura, a prikaz se mijenja svakim pritiskom na tipku.
3. Pritiskom na „SPEED-BRZINA“ odabire se brzina ventilatora između mala-srednja-velika-auto.
4. Pritisnite ON (UKLJ)/OFF (ISKLJ) tipku kako bi pokrenuli klima uređaj.
5. Ponovnim pritiskom na ON (UKLJ)/OFF (ISKLJ) tipku zaustavlja se rad klima uređaja.

Opaska: Modeli koji imaju samo hlađenje nemaju funkciju grijanja.

Način rada – ventilator

1. Pritisnite tipku „MODE-NAČIN RADA“, te odaberite način rada –fan (ventilator).
2. Pritiskom na „SPEED-BRZINA“ odabire se brzina ventilatora između mala-srednja-velika.
3. Pritisnite ON (UKLJ)/OFF (ISKLJ) tipku kako bi pokrenuli klima uređaj.
4. Ponovnim pritiskom na ON (UKLJ)/OFF (ISKLJ) tipku zaustavlja se rad klima uređaja.

Opaska: U načinu rada FAN (ventilator) ne djeluje funkcija postavke temperature.

Način rada – sušenje

1. Pritisnite „MODE_NAČIN RADA“ te odaberite način rada dry-sušenje.
2. Pritiskom na „▲“ ili „▼“ postavlja se željena temperatura, a prikaz se mijenja svakim pritiskom na tipku.
3. Pritiskom na „SPEED-BRZINA“ odabire se brzina ventilatora između mala-srednja-velika-auto.
4. Pritisnite ON (UKLJ)/OFF (ISKLJ) tipku kako bi pokrenuli klima uređaj.
5. Ponovnim pritiskom na ON (UKLJ)/OFF (ISKLJ) tipku zaustavlja se rad klima uređaja.

Funkcija pozadinskog osvjetljenja

(Samo za modele, koji imaju tu funkciju daljinskog upravljača)

Pozadinsko osvjetljenje na daljinskom upravljaču se može uključiti pritiskom na odgovarajuću tipku (DISPLAY) kako bi se uređajem moglo upravljati i u mraku. Pozadinsko osvjetljenje se automatski ugasi ako se tijekom 12 sek ne dodirne nijedna tipka.